

How to add a single sub-door station to the main door station (Through the door station interface)

Title:	How to add a single sub-door station to the main door station	Version:	v1.0	Date:	2020/11/24
Product:	Video Intercom			Page:	1 of 2

Preparation

1. This guide takes		
Туре	Model	Version
Door station*2	DS-KV8413-WME1(B)	V2.2.3_200805

As examples to introduce register sub-door station to main door station.

2. Software: iVMS-4200 Version 3.4.0.9

How to add a single sub-door station to the main door station

(Through the door station interface)

1) Add Devices on iVMS-4200

1) Search for online devices and add the door station on iVMS-4200, enter username and password, and then confirm that the device is online.



Title:	How to add a single sub-door station to the main door station	Version:	v1.0	Date:	2020/11/24
Product:	Video Intercom			Page:	2 of 2

2) Register Sub Door Station to Door station on Main Door Station Remote

Configuration interface

 Go to Device Management → Add, set the Device Type as Sub Door Station, fill in the necessary info of the device, The registration password is the password that must be configured for the activated device. When the door station adds an activated sub-door station, the registration password of the sub-door station must be known. The inactive sub-door station can be directly assigned by door station. The port is 8000.

	Live View User	Number Settings	Device Management Configu	ration						👤 admin 🛛 Ə Help	🕒 Logou
Device List											
+ Add De Import De Export	📋 Delete 🖉 Synchroniz	te						Status All	Device Type Ir	idoor Station	Y
No.	IP Address	Serial No.	Martin Contractor	Councet Vendes	Flooritie			User Name	Network Status	Operation	
· ·	10.9.96.150	226732706	Add Device					admin	A Offline	2	
			Device Type	Sub Door Station	~						
			User Name								
			Password	•••••	•						
			Registration Password	•••••	<						
			Serial No.	E65151867	٠						
			Floor No.	1	~						
			No.	1	C						
			IP Address	10.9.96.151	<						
			IPv4 Subnet Mask	255.255.255.0	<						
			IPv4 Default Gateway	10.9.96.254	•						
			Port	8000	•						
						ОК С	ancel				
					_						
otal 1 Items Items per Page 20 💌	Items		0202	0 Hikvision Digital Technolog	y Co., Ltd. All Rig	hts Reserved.			Prev Page 1	Next Page Go to	Page

2) When we complete the device info, you will see the page as shown below.

<mark>IKVIS</mark>	ION			Device Management						admin 🕕 Help	E+ Logout
Dev	rice List										
+ Add	C- Import C Export	📋 Delete 🛛 Synchron	ize					Status All	Device Type Sub	Door Station	×
	No.	IP Address	Serial No.	Model	Current Version	Floor No.	No.	User Name	Network Status	Operation	
		10.9.96.151	E65151867			1	1	admin	▲ Offline	C ê	

3) Wait 5 to 10 minutes, the devices will be online.

IIKVISION	Live View Us	er Number Settings	Device Management Conf	liguration				1	dmin 🚺 Help	E+Logout
Device List										
+ Add [2- Import	: 🗅 Export 📋 Delete 📿 Syn	chronize					Status All	Device Type	oor Station	V
No.	IP Address	Serial No.	Model	Current Version	Floor No.	No.	User Name	Network Status	Operation	
1	10.9.96.151	E65151867	DS-KV8413-WME1(B)	V2.2.3 build 200805	1	1	admin	Online	ピ 前	

