Adding CCTV Cameras To The HikVision Room Station

Revision 1.0

Introduction

This tech note will step you though the steps to setting up CCTV to the HikVision IP Intercom Room Stations.

Notes

This tech note will only work when using the HikVision Villa IP Intercom firmware version 1.4.71 Build 20170724.

Before you begin

Ensure you have your IP Intercom system working already.

Ensure you have your NVR connected to the customers network.

Ensure you know what the NVR's IP Address is, as well as the username and password to login to that NVR.

CORPORATION

1.1 Wiring Diagram

For best results it's recommended to have your system setup as a hardwired system.



1.2 Adding IP Cameras to System

1. Open your iVMS4200 software and select the room station you want to add the CCTV camera to and click 'Remote Configuration'.

+ Add Modify Collecte Remote Configuration Recode Activate Device Type Nickname Connection Network Parameters Device Serial No. Door Station Door Station TCP/IP 192.168.0.235:8000 DS-KV8102-IM0120170708 Indoor Station Room Station 1 TCP/IP 192.168.0.236:8000 DS-KH8300-T01201705260 Indoor Station Room Station 2 TCP/IP 192.168.0.237:8000 DS-KH8300-T01201705260	Device for Manag	Device for Management (3)					
Device Type Nickname Connection Network Parameters Device Serial No. Door Station Door Station TCP/IP 192.168.0.235:8000 DS-KV8102-IM0120170708 Indoor Station Room Station 1 TCP/IP 192.168.0.236:8000 DS-KH8300-T01201705264 Indoor Station Room Station 2 TCP/IP 192.168.0.237:8000 DS-KH8300-T01201705264	🕂 Add 🗹 M	odify 🗙 Delete	🏶 Remote Co	onfiguration 譏 QR Co	ode 🌻 Activate		
Door Station Door Station TCP/IP 192.168.0.235:8000 DS-KV8102-IM0120170708 Indoor Station Room Station 1 TCP/IP 192.168.0.236:8000 DS-KH8300-T0120170526 Indoor Station Room Station 2 TCP/IP 192.168.0.237:8000 DS-KH8300-T0120170526	Device Type	Nickname	Connection	n Network Parameters	Device Serial No.		
Indoor Station Room Station 1 TCP/IP 192.168.0.236:8000 DS-KH8300-T0120170526 Indoor Station Room Station 2 TCP/IP 192.168.0.237:8000 DS-KH8300-T0120170526	Door Station	Door Station	TCP/IP	192.168.0.235:8000	DS-KV8102-IM0120170708W		
Indoor Station Room Station 2 TCP/IP 192.168.0.237:8000 DS-KH8300-T0120170526	Indoor Station	Room Station 1	TCP/IP	192.168.0.236:8000	DS-KH8300-T0120170526WI		
	Indoor Station	Room Station 2	TCP/IP	192.168.0.237:8000	DS-KH8300-T0120170526WF		

2. Select 'Intercom' > 'IP Camera Information' from the side menu.



3. Click on 'Add' from along the top.

IP Ca	mera Information				
IP Cam	era Information				
A	dd Modify	Delete Export	Import		
Index	Device Name	Getting Stream URL	Manufacturer Protocol	User	Password

4. You now need to add your IP Camera or NVR/DVR settings.

Device Type



• Network IP Camera – If your IP Camera network cable is directly connected to the customer's network then you need to select this option.



• Doorphone – If you want to add the door station again to the LiveView screen then select this option.



Device Name – This can be anything you want.
IP Address – This is the IP address of the camera or NVR/DVR
Port – Unless this has been changed in the camera or NVR/DVR then enter 554.
Username – This is the username you login to the camera NVR/DVR with.
Password – This is the password you login to the camera NVR/DVR with.

Add IP Camera		×
Device Type: Ne	twork IP Camera	~
Getting Stream Mode: Dir	rect	~
Device Name: CO	CTV Camera	
IP Address: 19	2.168.0.34	
Port: 55	4	
User Name: ad	min	
Password: ••	•••••	
Manufacturer Protocol: HII	K Protocol	~
	OK Cano	cel

Once the above has been set click on OK to add the camera.

5. Step 3 &4 needs to be add for each of the cameras you want to add.

Each of the room stations will automatically get the cameras added so you don't need to do this for each of the room stations.

1.3 Setting Up Door Station and CCTV Camera Toggle

Introduced with firmware 1.4.71 Build 20170724 you can now toggle between the door station and 1 CCTV camera while talking to the person at the door station.

Note: Only CCTV cameras that have been setup as the device type 'Network IP Camera' during the setup can be used to toggle between the door station and the CCTV camera.



1. On the room station, tap on settings.

2. Select 'Configuration' from the side menu.



- 3. Enter in the admin password to enter the menu. By default the password is 123456 unless it has been changed.
- 4. Select 'Device' from the side menu.

	11	
🔌 Local Info		
Network		
Device 🤇		
Sync Time		
Restore		

- 5. Select the CCTV camera you want to use as the toggle camera. This camera must be setup as a Network IP Camera (other cameras that wasn't set up as Network IP Camera won't work). You can only have 1 CCTV camera to toggle between.
- 6. The last field needs to be set as either 0 or 1. If you want the camera to toggle then put it as a 1.
 - **0** = Doesn't allow the camera to toggle.
 - **1** = Allows camera to toggle.

		Add Device	×
[CCTV Camera	3	
	192.168.0.34	4	
	554		
	admin		

	1		

1.4 Switching Between Door Station Camera and CCTV Camera

While viewing the door station, tap on the Camera icon. This will then toggle between the Door station camera and CCTV camera.



Additional Information:

Customer Service Phone: 1

Email:

YouTube:

1300 551 991 (M-F 8:30am – 5:00pm) customerservice@ness.com.au www.youtube.com/nesscorporation

CORPORATION