SecurityWholesalers. com.au



Dahua Villa Intercom Guide Configure 1 VTH x 1 VTO





Default IP Address



VTH: 192.168.1.109



VTO: 192.168.1.110

Scenario & Environment

- For the guide
- Network Router IP : 192.168.1.1
- VTH IP : 192.168.1.109
- VTO IP: 192.168.1.110
- VTH Password: 123456
- VTO Password: digi12345

Initialise VTO

- Go to => 192.168.1.110
- Password: digi12345 (assign VTO admin password)

🗧 🔿 🥔 http://192.168.1.110/#/				- Ç	Search
WEB SERVICE ×					
	Device Init				×
			2	3	
		One	Тwo	Three	
		Username	admin		
		Password	•••••		
			Middle	High	
		Confirm Decouverd			
		Confirm Password	••••••		
			Next		

Initialise VTO

- Do not Need Email in VTO
 - Click Next
 - Click OK



Configure VTO

- Username: admin
- Password: digi12345 (VTO admin password)



VTO Network

- Network Setting
- IP address: 192.168.1.110
- Subnet Mask: 255.255.255.0
- Gateway: 192.168.1.1

WEB SERVICE2.0	放 Local Setting	a Household Setting	Network Setting	Log Management	▲ ♠ ତ-
Basic	TCP/IP				
FTP	IP Addr. 192.	168.1.110			
UPnP	Subnet Mask 255.	255.255.0			
	Gateway 192.	168.1.1			
SIP Server	MAC Addr. a0:b	d: 1d:83:af: 12			
IP Permissions	Preferred DNS 8.8.8	.8			
	Alternate DNS 8.8.8	.8			
	Port				
	Full				
	Port 80				
	HTTPS Port 443	Enable			
	Create Server CERT	Download Root CERT			

Initialise VTH

- Enter Password: 123456
- Confirm: 123456
- Email:
- We will use 123456 as password
- Email is used to reset the password later if needed

Configure VTH

- Hold the setting icon until login comes up
- Enter: 123456



Configure Network

- Local IP: 192.168.1.109
- Netmask 255.255.255.0
- Gateway: 192.168.1.1
- DHCP: OFF
- TCP: 37777



Configure VTH

- VTH Config
 - Room No.: 9901#0 Master
 - Rest of the setting unchanged



Configure SIP Server

• SIP Server

- Server IP: 192.168.1.110 (Main VTO IP)
- Network Port: 5060
- Username: 9901
- Register Pwd: (unchanged)
- Domain: (*empty*)
- Username: admin
- Login Pwd: digi12345 (Main VTO
- Enable Status: ON



VTO Config

- Main_VTO: Main VTO
- VTO IP: 192.168.1.110
- Username: admin
- Password: digi12345 (Main VTO admin password)
- Enable Status: ON



Mobile App Config

- App
 - Apple: iDMSS Plus
 - Android: gDMSS Plus
- Method: QR code/ Scan
- Dahua Intercom Video Guide
 - Add VTO to Mobile App in Youtube
 - https://youtu.be/2WLtcPkRmoM



Mobile App Config

• SN

- On the sticker on back of the VTO
 - QR code
 - S/N
- Web browser



Add to VTO to app

- Open the app
- Click Home icon (top left)







Scan VTO

- Scan the QR code in VTO sticker
- Click Search
- Click VTO





Add VTO to app

- Type Device Name
- Type VTO admin password





Subscribe to VTO

- Click Message
- Click Bell icon
- Subscribe to VTO





Mobile App overview

• Get call on the app



