


inception

WEB POWERED SECURITY

Simple & Easy Installation
Integrated Security - Access Control



1 Connect and plug in the power cord

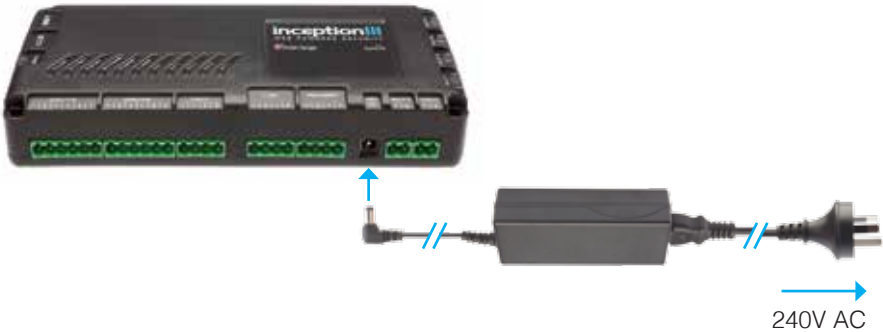


2 Wait for the Inception Controller to start up



- Initially, the POWER LED will turn on indicating power is being supplied to the controller
- During startup, the LEDs will light up in order from left to right to show progress
- The controller is ready when the SYSTEM LED is flashing



Wired (Ethernet) connection

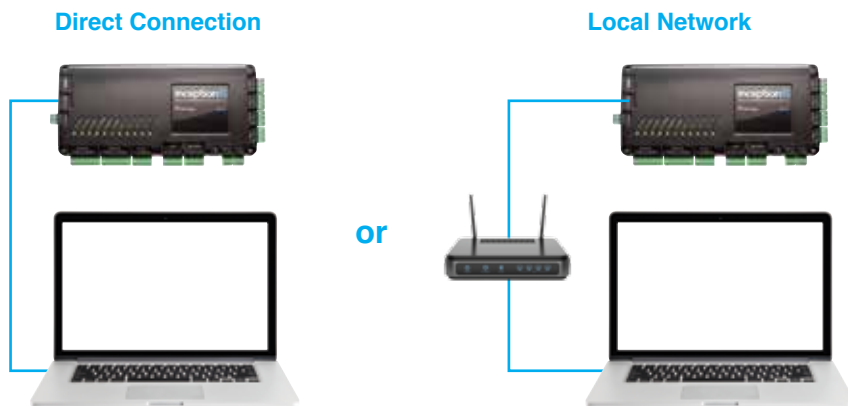

- Once connected, the ETHERNET LED will turn on
- To connect to the Inception web interface, the Inception's IP address is required. There are two different ways to find it the IP address:

LCD Terminal

- If using an LCD Terminal (available separately, see the installation manual for information on connecting the terminal to the Inception Controller), log on by pressing [0] [1] [OK] The IP address can be viewed by pressing [MENU] [5] [2] to reach the Network Settings section, then [V] to view the address
- Open a browser and navigate to the IP address



Inception Connect Utility

- Install the Connect Utility onto your computer. A copy of the installer is included on the USB stick inside the Inception box
- Run the Utility. It will automatically attempt to detect Inception devices on the local network
- Select your Inception from the list and press "Open In Browser"

