

DS-2SE4C425MWG-E/26 PTZ tracking configuration:

1. Calibrate the PTZ:

Common Settings

- Live View
- Playback
- Application Display
- User Management
- Calibrate**
- VCA
- Configuration
- Maintenance and Security

Local

System

System Settings

User Management

Calibrate

Network

Video/Audio

Image

PTZ

Storage

Event

Panorama Linkage

Calibration Mode: ☒ Auto (Fast) ☐ Manual Calibration

Scene: **Scene 1** Calibrating S... **Scene 2** Calibrating S...

Calibration Point:

Do One-Touch Calibration for Scene 2 as well

One-touch Calibration

Single Scene Calibration

No.	Panorama View(...)	PTZ Camera...	Operation
1	(365,543)	(290,5,1)	+ 🔍 🗑
2	(331,721)	(290,-10,1)	+ 🔍 🗑
3	(648,346)	(315,26,1)	+ 🔍 🗑
4	(613,605)	(315,5,1)	+ 🔍 🗑
5	(592,783)	(315,-10,1)	+ 🔍 🗑
6	(875,364)	(339,9,26,1)	+ 🔍 🗑
7	(866,638)	(339,9,5,1)	+ 🔍 🗑
8	(843,852)	(339,9,-10,1)	+ 🔍 🗑
9	(0,1000)	(0,0,0)	+ 🔍 🗑
10	(0,1000)	(0,0,0)	+ 🔍 🗑
11	(0,1000)	(0,0,0)	+ 🔍 🗑
12	(0,1000)	(0,0,0)	+ 🔍 🗑

PTZ Camera

27-04-2024 Wed. 08:55:30

2. Enable Tracking function:

Live View

Playback

Application Display

VCA

Configuration

Maintenance and Security


① Select Application

② Set Application


Complete the detailed settings of the smart application or event.


General Settings

Smart Event

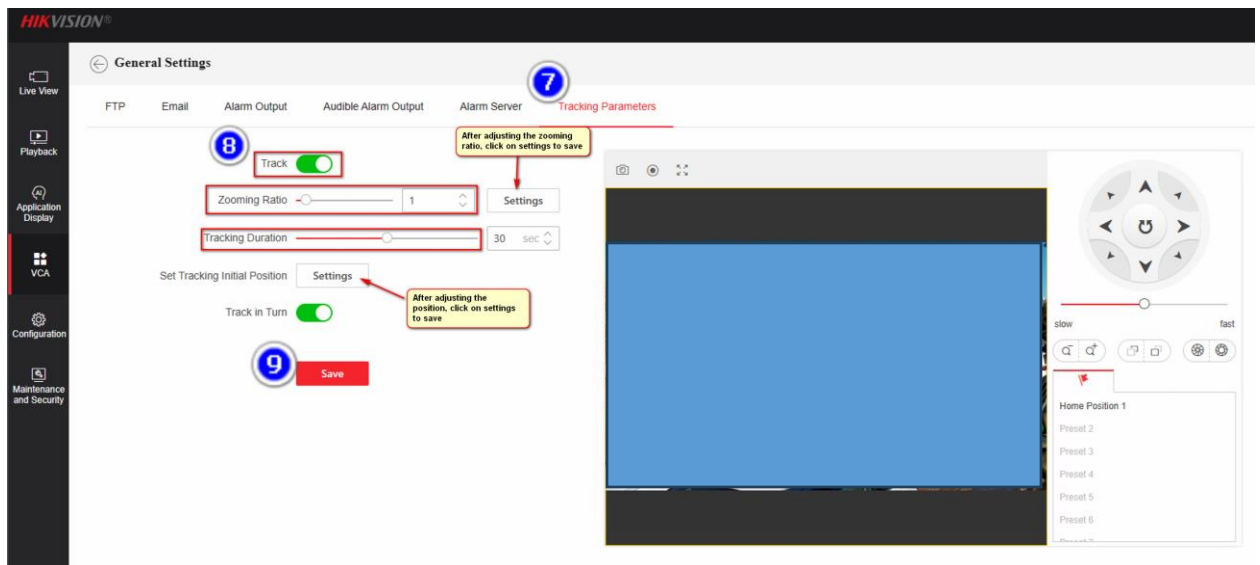

3. Configure Panovu camera smart event (For example intrusion):

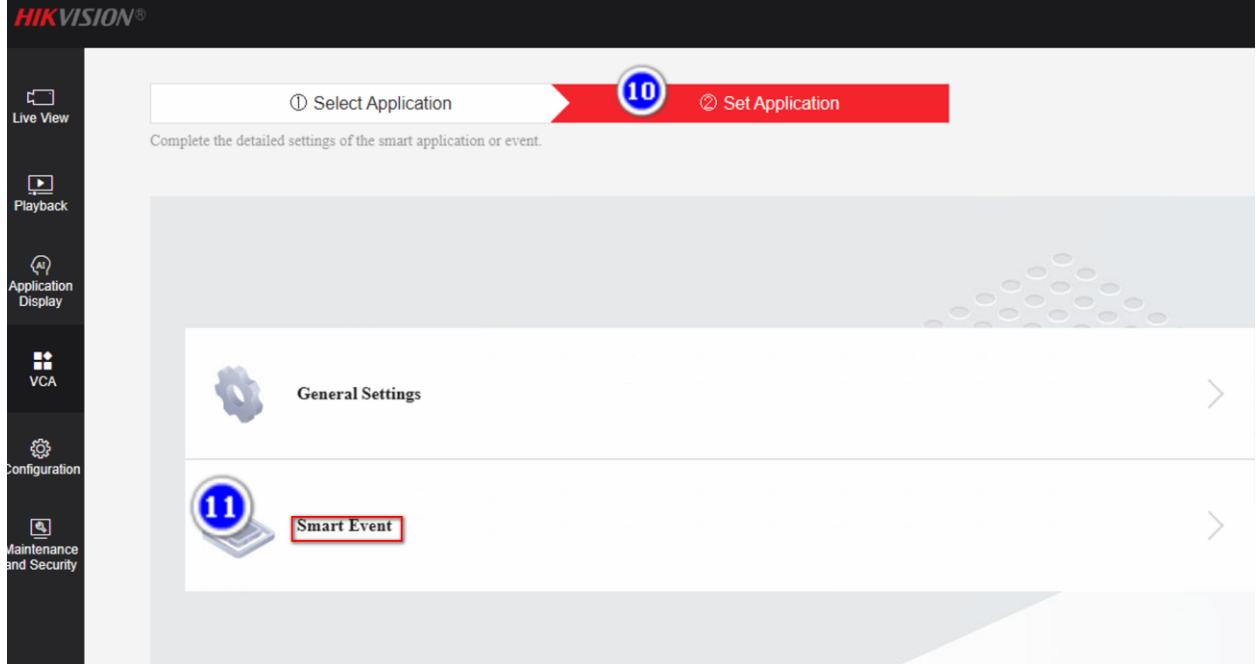

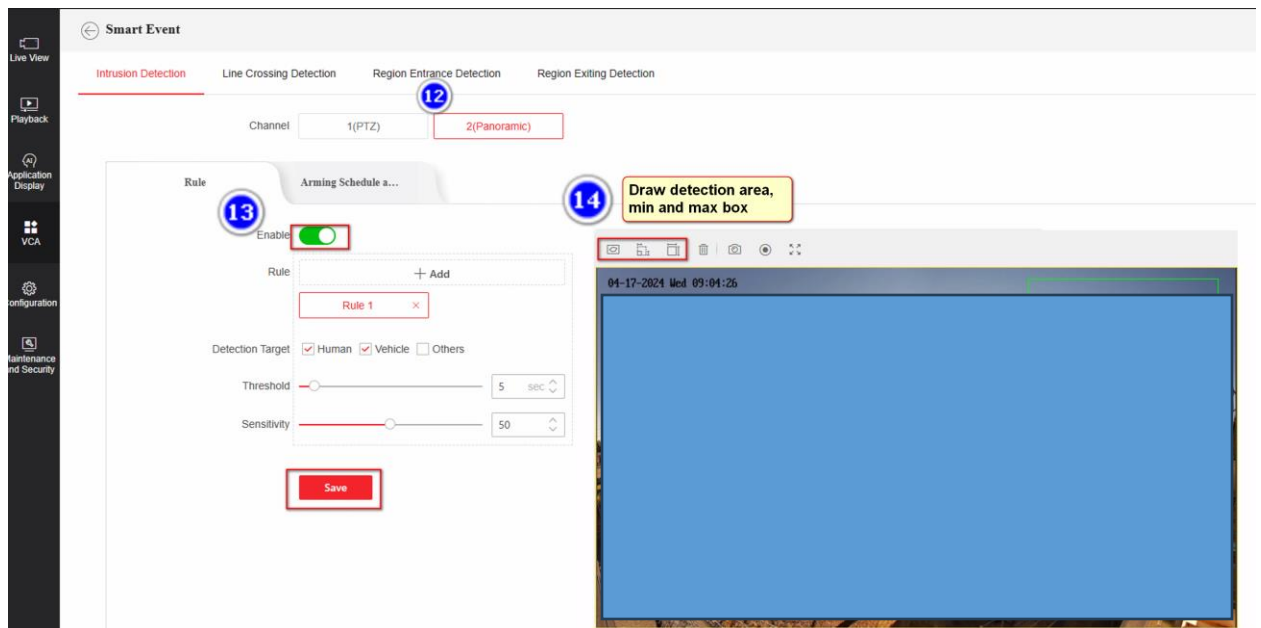

Result:

When PanoVu Camera trigger the intrusion, PanoVu camera will call PTZ to track.